



# Nikon Coolpix S70 Display Screen Replacement

Replace your broken or cracked display screen so you can use the touch display and view your pictures clearly.

Written By: Danielle Morris



## INTRODUCTION

This guide will assist you in replacing your broken, cracked or malfunctioning display screen. For this replacement you will need a Phillips #000 screwdriver and a plastic opening tool.


---



### TOOLS:

- [Phillips #000 Screwdriver](#) (1)
  - [iFixit Opening Tools](#) (1)
-


## Step 1 — Display Screen

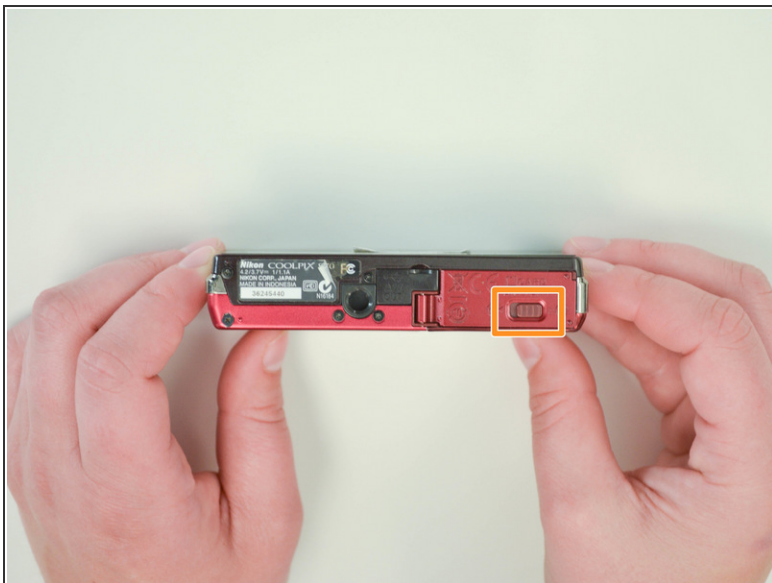

**i** Power off the camera before beginning.



- Remove the battery by sliding the latch located at the bottom of the camera.

## Step 2

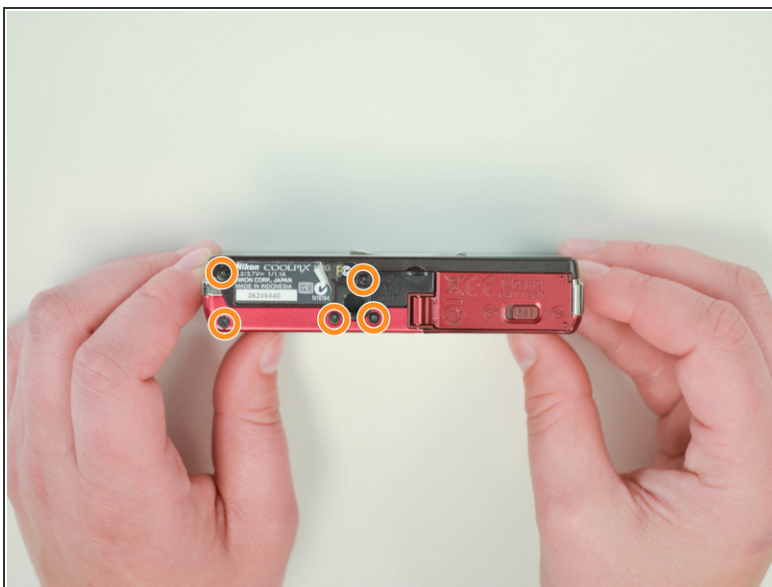




- Using a Phillips head #000 screwdriver, remove the five 0.4mm screws on the bottom of the camera.

## Step 3

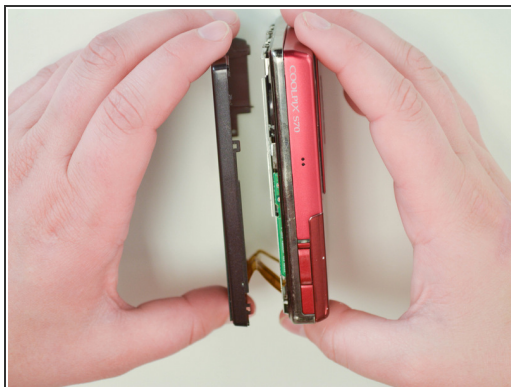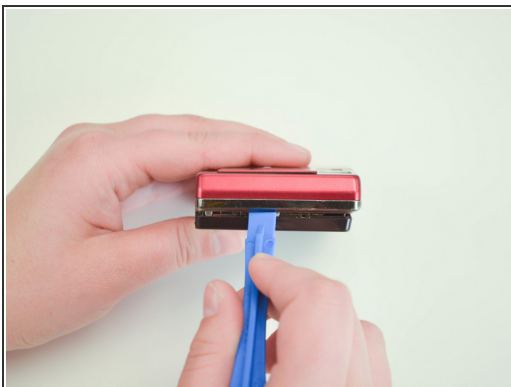

- Use a plastic opening tool to carefully separate the back panel of the camera.
- Once loosened, use your fingers to manually separate the two panels.


## Step 4

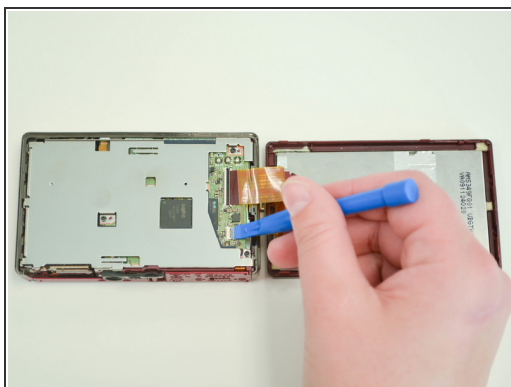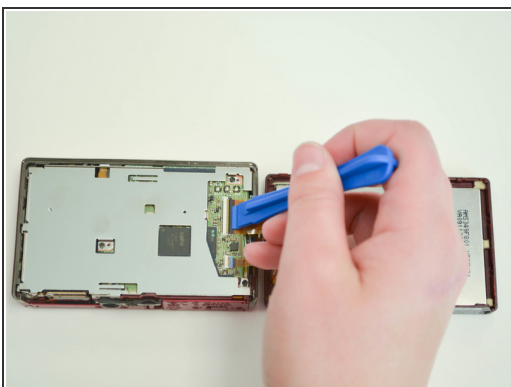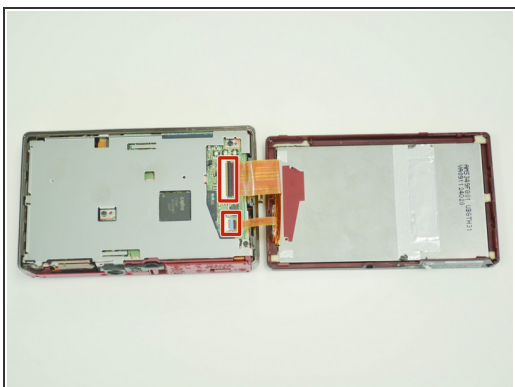

- Using a plastic opening tool, lift both latches that hold the ribbon cables in place.





## Step 5

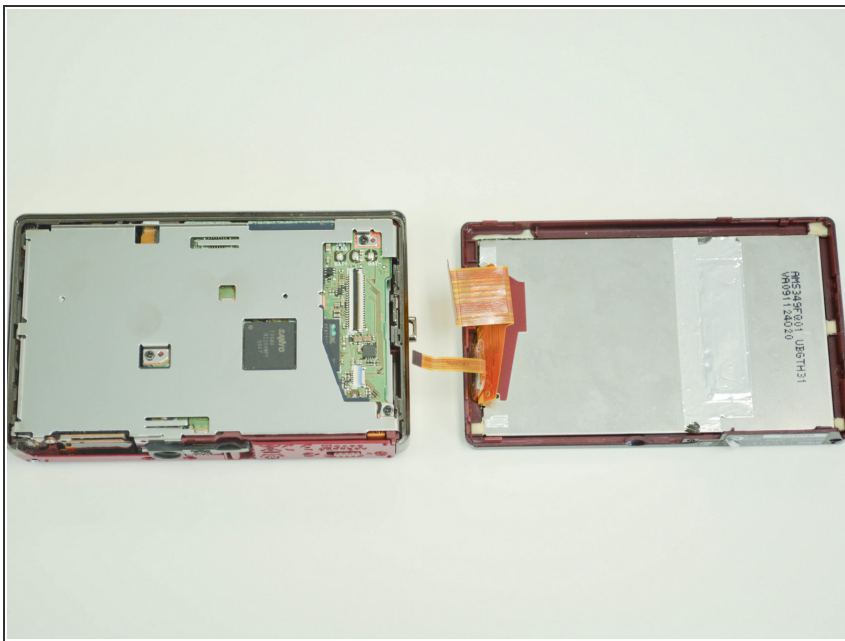

- Carefully disconnect the orange flat ribbon cables from the latches.

## Step 6

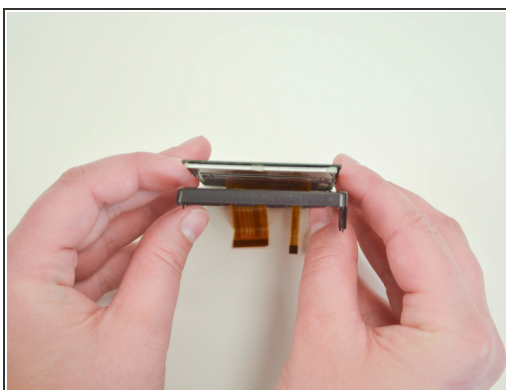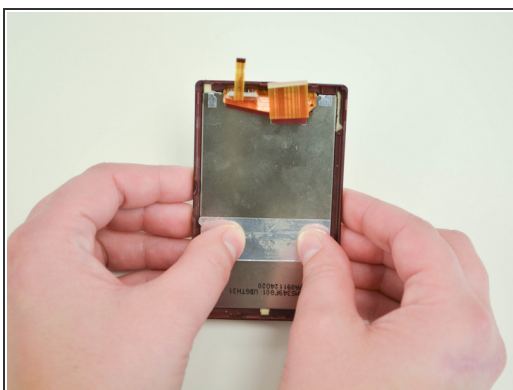

- Remove the screen from the case of the camera by carefully pushing on the back of the screen.  
ⓘ You may need to push with a little force to get the screen to loosen.

To reassemble your device, follow these instructions in reverse order.

This document was last generated on 2017-06-21 07:50:43 AM.